


22. Wiper Deicer Switch

A: REMOVAL

- 1) Remove the instrument panel lower cover. <Ref. to EI-38, REMOVAL, Instrument Panel Lower Cover.>
- 2) Disconnect the harness connector and remove wiper deicer switch.

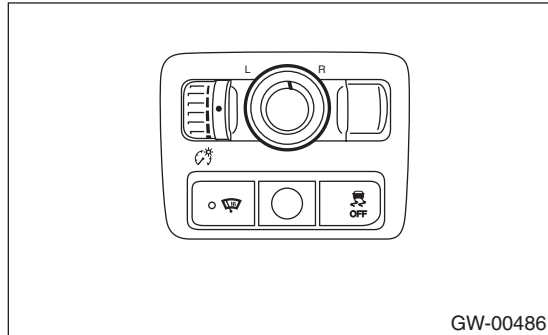

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. CHECK WITH SUBARU SELECT MONITOR

CAUTION:

Check whether the wiper deicer timer is in initial setting or customize setting before performing inspection.

- 1) Check the input signal when the wiper deicer switch is operated using Subaru Select Monitor.

(1) Prepare the Subaru Select Monitor kit. <Ref. to GW-6, PREPARATION TOOL, General Description.>

(2) Turn the ignition switch to ON (engine OFF), and run the "PC application for Subaru Select Monitor".

(3) On the «System Selection Menu» display screen, select the {Integ. Unit mode}.

(4) Select the {Current Data Display & Save}.


(5) Display the data of the wiper deicer switch.

- 2) When wiper deicer switch is turned to ON, check whether it turns to OFF in 15 minutes, or it operates continuously.

3) If it turns to OFF in step 2) above, it is normal. When it operates continuously, replace the body integrated unit.

2. CHECK SWITCH

Remove the wiper deicer switch, and measure the switch resistance.

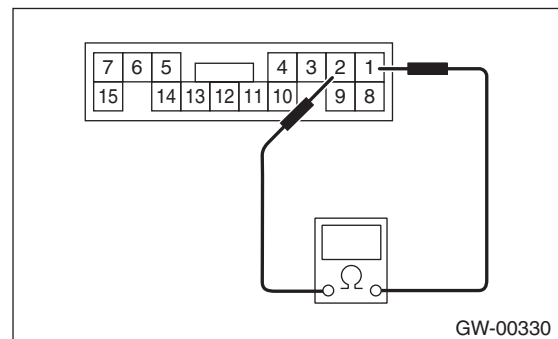

| Switch position | Terminal No. | Standard |
|-----------------|--------------|---------------|
| OFF | 1 and 2 | 1 MΩ or more |
| ON | | Less than 1 Ω |

Replace the wiper deicer switch if faulty.

Wiper Deicer Switch

GLASS/WINDOWS/MIRRORS

BODY STRUCTURE

BS

| | Page |
|---------------------------------|------|
| 1. General Description | 2 |
| 2. Datum Dimensions | 3 |
| 3. Body Sealing | 23 |
| 4. Anticorrosion Wax | 31 |
| 5. Under Coat | 39 |
| 6. Galvanized Sheet Metal | 43 |
| 7. Aluminium Sheet Metal | 44 |